


THE TENBY R.M.1. SPUR CONNECTION BOX (NON-FUSED)

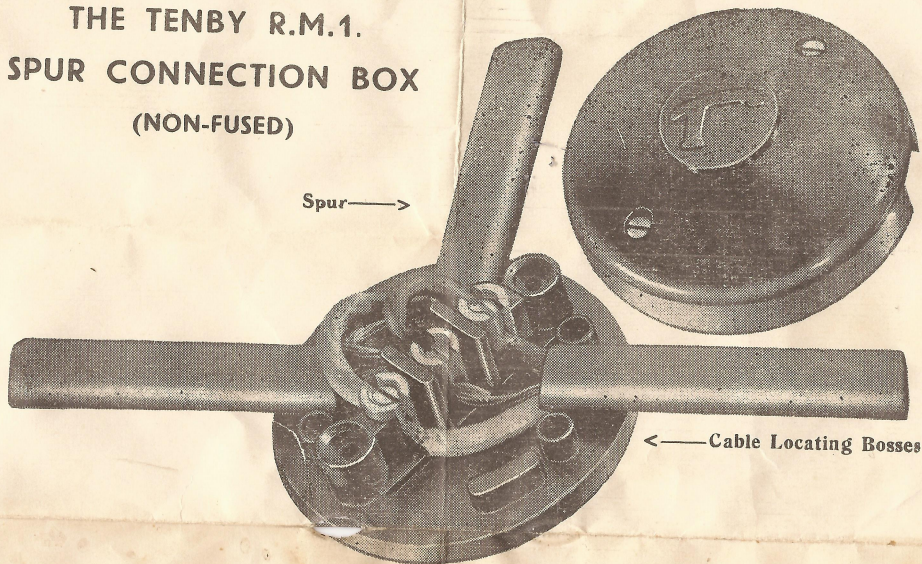

WIRING INSTRUCTIONS

It should be noted that the terminals in this box lie at an angle relative to the cable runs, thus permitting a straight run through for the ring main. Spurs can be taken off at right angles to or parallel with the main. If a spur is to

be run back parallel with the main, the hollow locating bosses should be broken off. When installing a through unbroken main the outer sheathing and cores should be stripped as indicated below.

